


INNOVOLTUS

New things under the sun

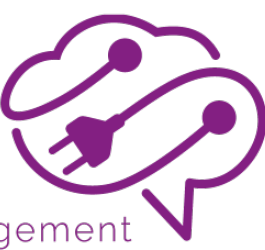

JULLIX 
Brain of your energy management

step2

Inhoudsopgave

Step 2: DSMR 3

Step 2: DSMR

Als de digitale meter via de P1 poort wordt aangesloten aan de Jullix, kan je bij DSMR **(1)** instellen welk protocol gebruikt moet worden.

Als de installatie geen digitale meter heeft en er een energiemeter geïnstalleert wordt, dan **Disable (2)** je de DSMR meter.

The screenshot shows a web browser window with the URL 'Innovoltus JULLIX configuration' and the IP address '192.168.4.1'. The page title is 'JULLIX Status Config'. The main heading is 'Configuration'. Under 'Step 1: Direct (Wireless & Wired)', 'Step 2: DSMR' is selected and highlighted in blue. Below this, a text box explains: 'This step selects the correct standard that the digital meter uses. The selected standard needs to match the location where the JULLIX module is used.' There are three options: **1** ☒ P1 version 5, Belgium; ☐ P1 version 5, Netherlands; and **2** ☐ Disable. A red **3** points to the 'Apply' button. Below the DSMR section, other configuration steps are listed: Step 3a: Modbus RTU A, Step 3b: Modbus RTU B, Step 4: SunSpec TCP, Step 5a: Modbus TCP T, Step 5b: Modbus TCP U, and Step 5c: Modbus TCP V.

Met **Apply (3)** wordt de instelling bewaard.